


WASHER OPERATING INSTRUCTIONS

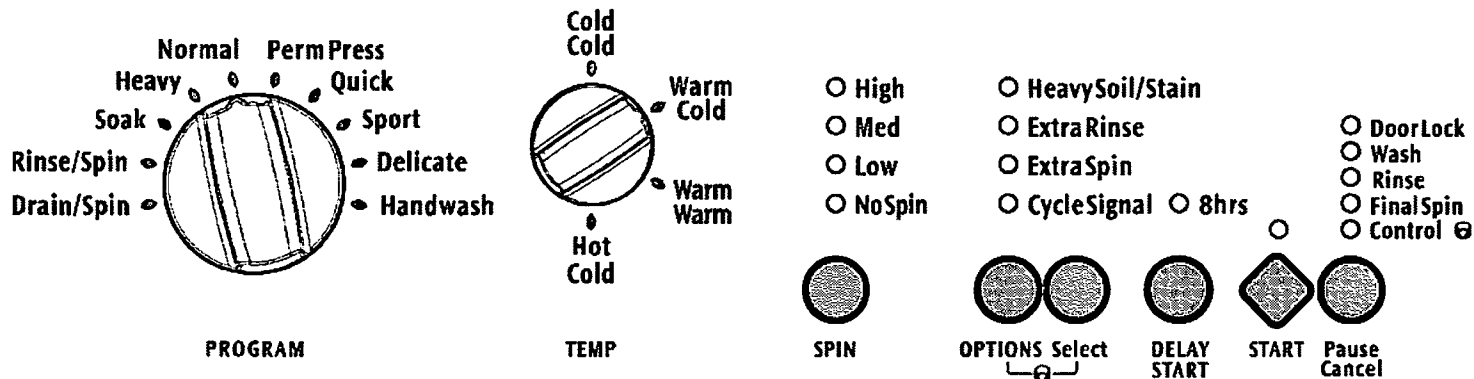


Before Operating Your Washer

Read your washer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best washing results.

WARNING To reduce the risk of fire, electric shock or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

Operating Steps

Read and follow "Washing Procedures" in your Owner's Guide. It provides detailed information for preparing the wash load and choosing control settings to ensure best washing results.

- Sort laundry into loads that can be washed together.
- Prepare items for washing.
- Pretreat stains and heavy soil.
- Add laundry load to the wash drum.
- Add laundry products to the dispenser.
 - Detergent, bleach and fabric softener will be dispensed at the proper time in the cycle.
 - Slide safety latch to the right to open the dispenser drawer.
 - Add the recommended amount of a high efficiency  detergent to the detergent compartment.
 - If desired, add liquid chlorine bleach and liquid fabric softener to the appropriate compartments.
 - Slowly close the dispenser drawer. Closing the drawer too quickly could result in early dispensing of bleach or fabric softener.
 - Any water remaining in the dispenser at the end of the cycle is a result of siphoning action and part of normal operation.

- Select the appropriate cycle and temperature for the load.
 - Turn the PROGRAM knob to select the cycle.
 - Turn the TEMP knob to select the wash and rinse temperatures.
 - If the water temperature combination is not appropriate for that cycle, the status lights will blink and the signal will beep 3 times.
- The suitable final spin speed and options for that cycle will automatically be displayed.
 - To change the final spin speed, press SPIN until the indicator for the desired selection is lighted.
 - To select or delete an option, press OPTIONS, then Select. The indicator light will stop blinking when the option has been selected. It will not light if the option is not available for that cycle.
 - Adjustments to the cycle will be remembered each time that cycle is selected in the future
 - See "Washer Settings Chart" chart for factory settings.

Note: To provide the best care for your laundry items, not every temperature, speed and option is available with every cycle.

- Select Delay Start to delay the beginning of the cycle for 8 hours.
- Start the washer.
 - Close the door and press START. The washer will not operate with the door open.
 - As a safety measure, the door will automatically lock during the entire wash cycle and the Door Lock indicator will be lighted.
 - To pause the cycle or change settings, press Pause/Cancel once.
 - If the cycle is interrupted during spin, it will take approximately 2-3 minutes for the door lock to release. DO NOT force the door open.
 - To stop the washer, press Pause/Cancel twice.

- A signal will sound when the cycle signal option is selected. Remove items when cycle ends.

Cycle Selection

Turn PROGRAM knob until desired cycle is selected. For best results, follow the fabric care label instructions on items to be washed.

Heavy

This cycle provides 16 minutes of reversing tumble wash action for heavily soiled regular items, followed by 3 rinses plus an automatic extra rinse and a final spin. Hot water is recommended to remove heavy soil and most stains. Heavy Soil/Stain and Extra Spin are available options.

Normal

Normal Cycle provides 13 minutes of reversing tumble wash action for normally soiled loads followed by 3 rinses and a final spin. Heavy Soil/Stain, Extra Rinse and Extra Spin are available options.

Perm Press

Perm Press Cycle provides 10 minutes of reversing tumble wash action for cottons and blends with a no-iron finish followed by a Cool Down rinse, 2 additional rinses and a final spin. To minimize wrinkling, the Warm Rinse and Extra Spin are not available with this cycle. Heavy Soil/Stain and Extra Rinse options can be selected

Quick

Quick Cycle provides 5 minutes of reversing tumble wash action for lightly soiled items that must be laundered quickly, followed by 2 rinses and a final spin. To save time, Heavy Soil/Stain, Extra Rinse and Extra Spin options are not available in this cycle.

Cycle Selection (Con't)

Sport

This cycle is designed for small loads of lightweight, synthetic apparel worn for working out, running, swimming, cycling, tennis and similar activities when removal of light soil and perspiration are important. Items will tumble occasionally as they soak for 10 minutes. Reversing tumble wash action will continue for 6 minutes followed by 3 rinses and a final spin.

For best results, select a detergent that contains enzymes and the hottest wash water safe for the load. Add a detergent booster, color safe bleach or odor eliminator with the detergent if needed. Chlorine bleach should not be used on items containing Lycra™. Fabric softeners reduce wicking and are not recommended for garments made to pull moisture away from the body.

Delicate

This cycle provides 10 minutes of gentle reversing tumble wash action for knits and delicates, followed by 3 rinses and a final spin. To protect your delicate items, a hot water wash is not available. Extra Rinse is an available option.

Handwash

Select the Handwash Cycle for items labeled "Hand Washable". Ten minutes of occasional tumbling are followed by 3 rinses and a slow final spin. To protect your hand washables, a hot water wash, Heavy Soil/Stain and Extra Spin are not available options. Extra Rinse is an available option.

Soak

Use this cycle to soak heavily soiled and stained items before washing. Only cold water is available with this cycle because warmer water may set some stains. Add half the detergent dose and a detergent booster, if desired, to the detergent compartment. Six minutes of regular reversing tumble wash action are followed by 30 minutes of occasional tumbling as the load soaks. The water will drain out and the load will spin slowly for several minutes. Follow Soak with a complete wash cycle suitable for the load and a full detergent dose.

Drain/Spin

Use the Drain/Spin cycle as a follow-up to a No Spin selection or anytime you want to drain water from the washer and spin out the load. Select the spin speed appropriate to the load.

Rinse/Spin

Select Rinse Spin for loads that need a cold water rinse or to add fabric softener that may have been omitted in a regular cycle. Add the fabric softener to the dispenser chamber if desired. Select the spin speed appropriate for the load.

Note: To change cycle, press Pause/Cancel twice.

Cycle Settings

Turn the TEMP knob and press SPIN until the desired wash and rinse water temperatures and final spin speed are selected. If the water temperature combination is not appropriate for that cycle, the status lights will blink and the signal will beep 3 times. Settings cannot be changed after the cycle starts unless you pause the program first. Adjustments to the cycle will automatically be remembered each time that cycle is used.

Wash / Rinse Water Temperatures

Select the wash and rinse water temperatures appropriate for each load.

- **Hot/Cold** for heavily soiled, white/colorfast cotton and perm press loads.
- **Warm/Cold** for normally soiled, white/colorfast, cotton and perm press loads.
- **Cold/Cold** for lightly soiled, non-colorfast items, knits, delicates and hand washables.
- **Warm/Warm** for washable woolens.

Final Spin Speed

The suitable final spin speed for each cycle will automatically be displayed. The speeds will vary from cycle to cycle. For example, High Speed in the Normal cycle is much faster than High Speed in the Handwash cycle. To change the final spin speed, press SPIN until the indicator for the desired selection is lighted. If a spin speed is not recommended for a cycle, it will not be displayed.

- Increasing spin speed will extract more water and decrease drying time.
- Decreasing spin speed will reduce wrinkling.
- Use **No Spin** to omit the final spin at the end of the cycle. The load will be very wet. Remove items from wash drum to drip dry or select Drain/Spin to remove excess water at a more convenient time.

Water Level

There is no need to select a water level. The washer automatically adjusts the water level to the type and size of wash load.

Cycle Options

To select Heavy Soil/Stain, Extra Spin, Extra Rinse or Cycle Signal, press OPTIONS until the light indicates the desired option. Then press Select to add that option to the cycle. To delete an indicated option, press Select again. To provide the best care for your laundry items, all options are not available with every cycle.

Heavy Soil / Stain

Use this option to add approximately 2 minutes of wash time for very soiled or stained loads.

Extra Rinse

Use this option when additional rinsing is desired to remove excess dirt and detergent. It is recommended for heavily soiled loads or if household members have sensitive skin. Extra Rinse occurs before the final rinse when the liquid fabric softener is dispensed.

Extra Spin

Use this option to add several additional minutes to the final spin at the selected speed. This will improve water extraction and decrease drying time.

Cycle Signal


A signal will sound at the end of the cycle when the cycle signal is selected.

Washer Features

Delay Start


Press the Delay Start to select a wash time convenient to your schedule or during off peak energy hours. The start of the cycle can be delayed for 8 hours.

Control (Control Lock)

To avoid having someone accidentally start or stop the washer, press OPTIONS and Select at the same time and hold for about 10 seconds until the Control  (Control Lock) lights up. To unlock the controls, press and hold OPTIONS and Select for about 10 seconds.

Status Lights

The following will be displayed during the cycle:

- Door Lock
- Wash
- Rinse
- Final Spin
- Control  (Control Lock)

WASHER SETTINGS CHART

The following chart shows the temperatures, spin speeds and options available for each cycle.

	Heavy	Normal Cycle	Perm Press	Quick Cycle	Delicate	Handwash	Soak	Sport	Drain Spin	Rinse Spin
Estimated Cycle Duration **	53 minutes	44 minutes	39 minutes	30 minutes	34 minutes	32 minutes	41 minutes	53 minutes	12 minutes	18 minutes
Temperatures										
Cold/Cold	✓	✓	✓	✓	✓	* ✓	* ✓	✓		* ✓
Warm/Cold	✓	* ✓	* ✓	* ✓	* ✓	✓		* ✓		✓
Warm/Warm	✓	✓		✓	✓	✓		✓		✓
Hot/Cold	* ✓	✓	✓	✓						
Speed										
High Spin	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓
Medium Spin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Low Spin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
No Spin	✓	✓	✓	✓	✓	✓	✓	✓		✓
Options										
Cycle Signal	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓
Heavy Soil/Stain	✓	✓	✓							
Extra Rinse	* ✓	✓	✓		✓	✓		✓		
Extra Spin	✓	✓						✓		
Delay Start	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

* Factory Settings

✓ Available settings

** Estimated cycle duration is based on factory settings and does not include water fill times, out-of-balance or oversudsing corrections.